

# SC-50-Pelco-422-V2



## Pelco RS-422 Camera Control Code D/P Converter Ver 2.0

Receives Pelco "P" or "D" code and retransmits it as "P" or "D" code at different baud rates.

Input Pelco "D" or "P" code at 2400, 4800, 9600 or 19200 baud is detected automatically.

The output can be set to "P" or "D" at a switch selectable baud rate and parity.

A test mode sends a continuous square movement pattern to test communications to a P/T without a Pelco controller. The input receiver is disabled during test mode.

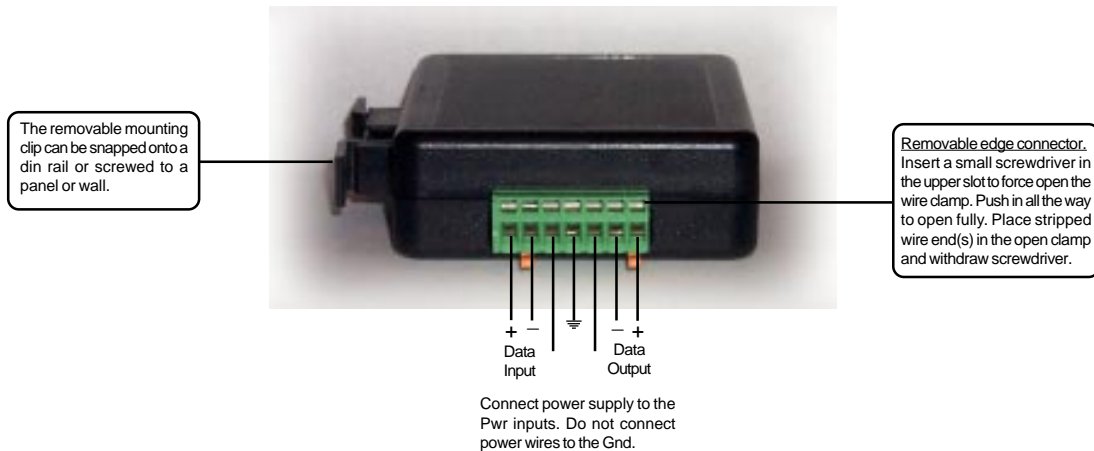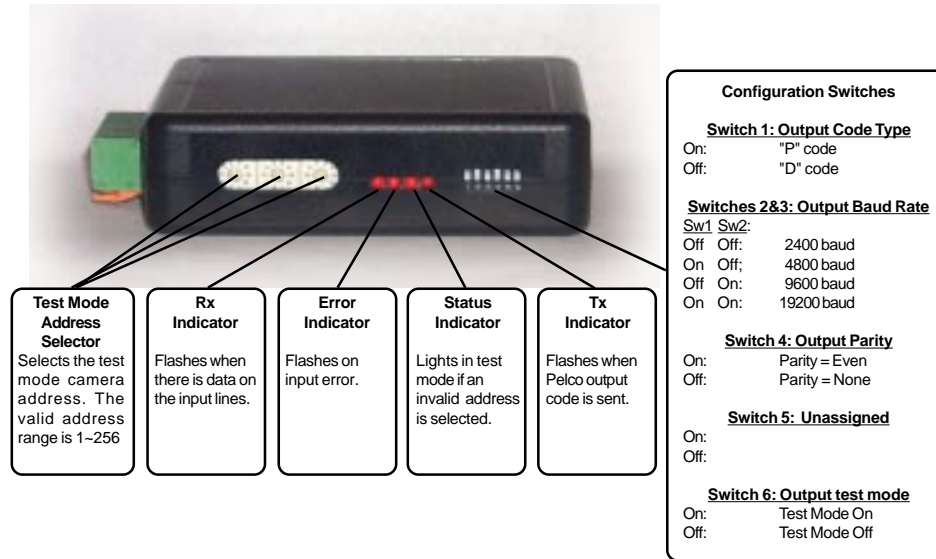

### SPECIFICATIONS

Size: 4.5" x 3.5" x 1.25"  
 Weight: 0.5 lb  
 Power: 9~15Volt AC or DC at 75ma  
 Environmental: Indoor use only

[www.sennetech.net](http://www.sennetech.net)

Sennetech, Inc. 6455 W. Bath Rd, Perry, MI 48872 U.S.A. Ph (517) 675-1150 Fax (517) 675-1151

## **NOTES**

### **Switch Settings**

Any changes in switch settings are effective immediately, they are not read only on power up.

### **Indicators**

**Rx** indicator will flash when there is data on the input. If it is on constantly, the input wires are probably reversed.

**Error** indicator will flash if the input code is not recognized as valid Pelco code. It will flash momentarily when the unit is detecting the input code type and baud rate.

**Status** indicator will light if test mode is turned on and the address switches are not set to a valid address (1~256).

**Tx** indicator will flash for each Pelco packet sent.

### **Test Mode**

When switch 6 is On, the input is disabled and a continuous square movement pattern is sent to the camera address set by the address selector switches; pan right, tilt down, pan left, tilt up.