



# SCT-100-Kalatel-Sensormatic

## Kalatel RS-422 to Sensormatic RS-422 Code Translator Ver 1.1

The code translator converts Kalatel control code to Sensormatic RS-422 code for a single P/T/Z.  
Only camera commands for the address matching the Address Selector switches will be converted.

Input Kalatel code type & baud rate is detected automatically. Sensormatic output is 4800 buad N81.

A test mode sends a continuous square movement pattern to the P/T/Z so the wiring and addressing between the translator and the P/T/Z can be checked without a Kalatel controller.

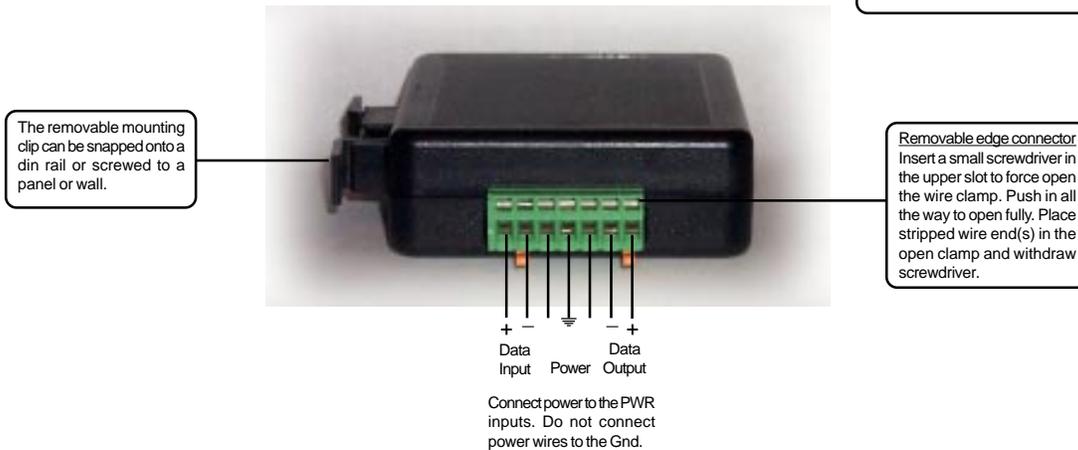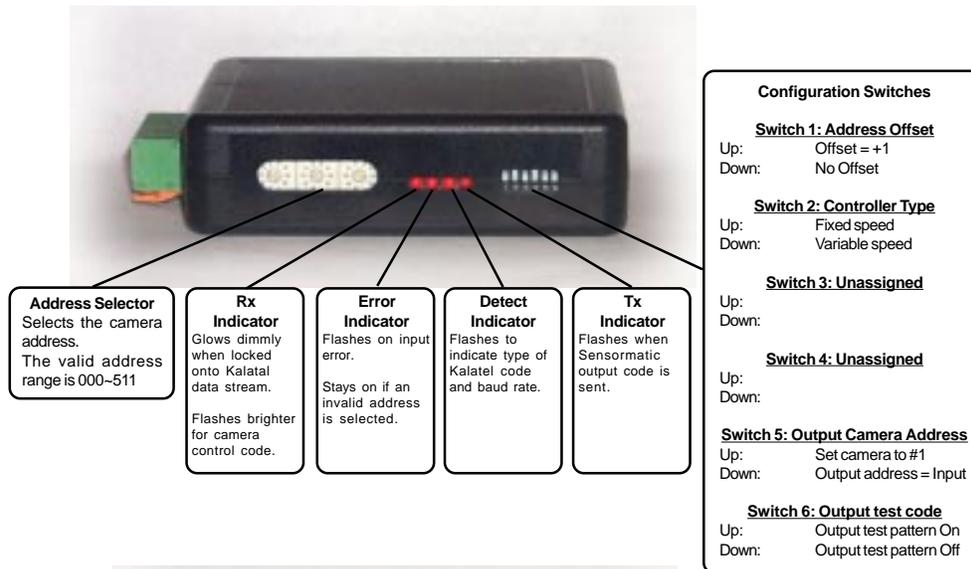

### SPECIFICATIONS

Size:	4.5" x 3.5" x 1.25"
Weight:	0.5 lb
Power:	9~15Volt AC or DC at 75ma 24Volt optional
Environmental:	Indoor use only

**Sennetech, Inc. 6455 W. Bath Rd. Perry, MI 48872, U.S.A. Ph (517) 675-1150 Fax (517) 675-1151**

[www.sennetech.net](http://www.sennetech.net)

## NOTES

### **Addressing**

Only camera control code for the camera number set by the Address Switches is converted.

Set switch 1 On if controller sends data addressed to one number lower than the camera number selected. If switch 5 is On, the output code is always addressed to camera # 1. Otherwise, the output code address is determined by the Address Switches. The Sensormatic addresses roll over at 256 to Kalatel camera #257 will be sent to Sensormatic camera #001, #258 to #002, etc.

### **Indicators**

Even when not controlling a camera, Kalatel sends a continuous stream of data which the code translator automatically locks onto. Once locked, the **Detect** indicator will flash the type of code found. First, it flashes twice for Digiplex II or three times for Digiplex III. Then it will flash either twice for 2400 baud or four times for 4167 or 4800 baud.

While locked, the **Rx** indicator will glow at a low level. Whenever camera control data appears, it will flash brighter.

Input code errors will cause the **Error** indicator to flash. If the address switches are not set to a valid address (000~511), the **Error** indicator will light continuously.

The **Tx** indicator flashes once for each Sensormatic packet sent.

## OPERATION

### **PTZ**

The code translator converts pan, tilt, zoom, focus and iris commands directly. Other commands are converted according to the following table.

	<u>KALATEL</u>	<u>SENSORMATIC</u>
<b>Presets</b>	Auto pan Auto focus  Pgm Pset 1~7 Set 1~7	Run pattern 1 Set Auto-Iris / Auto-focus  Store target 1~7 Go to target 1~7
<b>Patterns</b>	Set 21 Set 22 Set 23 Set 10	Define start of pattern 1 Define start of pattern 2 Define start of pattern 3 Define end of pattern
	Once a pattern is stored, it can be run using the following commands. Set 11 Set 12 Set 13	Run pattern 1 Run pattern 2 Run pattern 3
<b>Vertical Phase</b>	Set 60 Set 61	Exit V-phase mode Enter V-phase mode (Use iris open/close to adjust phase)
<b>Dome Configuration Menu</b>	Set 62	Start Dome Configuration Menu.
	While the menu is displayed, the following control functions are in effect: Pan & Tilt Focus Far Zoom In/Out  Iris Close	Move the highlight bar Select the highlighted item Inc/Dec value of selected field, display next item, or move cursor. Return to previous menu or exit
<b>Reset Dome</b>	Set 63	Reset Dome to factory defaults