

www.sennetech.net

Sennetech, Inc. 6455 W. Bath Rd. Perry, MI 48872 U.S.A. Ph (517) 675-1150 Fax (517) 675-1151

### **PRODUCT DESCRIPTION**

The SCT-1076 is a Kalatel RS-422 to Panasonic RS-485 camera control code translator designed to permit control of Panasonic cameras from Kalatel controllers. It receives Kalatel RS-422 commands and transmits the appropriate commands in Panasonic RS-485 code format.

Kalatel input of Digiplex II at either 2400 or 4167 baud or Digiplex III at either 2400 or 4800 baud is detected automatically.

Panasonic RS-485 output is switch-selectable from 2400 to 19.2k baud. There are four independent outputs.

Input and output connections are made with mating screw terminal connectors. Front panel LEDs indicate power, receive, transmit, and status.

There is an optional 19" rack mount panel (one rack unit high).

### SPECIFICATIONS

SIZE: WEIGHT: POWER: INDICATORS: KALATEL RS-422 INPUT: PANASONIC RS-485 OUTPUTS: 19"W x 1.75H x 5.45D
1.5 lbs.
9Volt to 18Volt AC or DC at .75 Watts
Front panel LEDs: Power, Rx, Tx, and Status
(1) 3-pin mating screw terminal connector
(4) 3-pin mating screw terminal connectors

To install the case on the rack mount frame, remove the front panel and the plastic bezel. The rack mount frame takes the place of the bezel as shown below.



### **SETTING THE SWITCHES**

To set the configuration switches, remove the back panel, which is secured by two screws. Then slide the cover back to expose the switches. The switches can be changed while the code translator is powered up and the new settings will take effect immediately.



On Kalatel keypads, such as the KTD-304, Camera 000 is selected to control a camera whose address switches are set to 0, Camera 001 controls a camera set to 1, and so on.

On KTD-405 keypads and some DVRs that support the Kalatel digiplex protocol, Camera 000 can not be selected. The lowest camera number is 1. However, when Camera 001 is selected, the data packet sent to the camera is addressed to 0, Camera 002 is addressed to 1, etc.

## ADDRESS GROUPS of 96

# Group 001~096

# Group 097~192

# Group 193~288

Kalatel	Panasonic		Kalatel	Panasonic								
1	1	49	49	97	1	145	49	193	1		241	49
2	2	50	50	98	2	146	50	194	2		242	50
3	3	51	51	99	3	147	51	195	3		243	51
4	4	52	52	100	4	148	52	196	4		244	52
5	5	53	53	101	5	149	53	197	5		245	53
6	6	54	54	102	6	150	54	198	6		246	54
7	7	55	55	103	7	151	55	199	7		247	55
8	8	56	56	104	8	152	56	200	8		248	56
9	9	57	57	105	9	153	57	201	9		249	57
10	10	58	58	106	10	154	58	202	10		250	58
11	11	59	59	107	11	155	59	203	11		251	59
12	12	60	60	108	12	156	60	204	12		252	60
13	13	61	61	109	13	157	61	205	13		253	61
14	14	62	62	110	14	158	62	206	14		254	62
15	15	63	63	111	15	159	63	207	15		255	63
16	16	64	64	112	16	160	64	208	16		256	64
17	17	65	65	113	17	161	65	209	17		257	65
18	18	66	66	114	18	162	66	210	18		258	66
19	19	67	67	115	19	163	67	211	19		259	67
20	20	68	68	116	20	164	68	212	20		260	68
21	21	69	69	117	21	165	69	213	21		261	69
22	22	70	70	118	22	166	70	214	22		262	70
23	23	70	70	110	23	167	70	215	23		263	70
24	20	72	72	120	20	168	72	216	20		264	72
25	25	72	73	120	25	160	73	217	25		265	73
26	26	74	74	121	26	170	73	218	26		266	73
20	20	75	75	122	20	170	75	210	20		200	75
28	28	76	76	120	28	172	76	210	28		268	76
20	20	77	70	125	20	173	70	220	20		260	70
30	30	78	78	125	30	174	78	221	30		200	78
31	31	70	70	120	31	175	70	222	31		270	70
32	32	80	80	127	32	176	80	220	32		271	80
32	33	81	81	120	33	170	81	224	33		272	81
3/	34	82	82	129	34	178	82	225	34		273	82
25	34	02	02	121	34	170	02	220	34		274	02 92
30	30	03	03	122	30	1/9	03 94	227	30		275	03 94
27	30	04	04	102	30	100	04	220	30		270	04
37	37	60	00	100	37	101	00	229	37		277	00 00
30	30	00	00	104	30	102	00	230	30		270	00 97
39	39	07	07	130	39	103	07	201	39		219	07
40	40	00	00	130	40	104	00	232	40		200	00
41	41	89	09	100	41	100	09	233	41		201	09
42	42	90	90	138	42	180	90	234	42		282	90
43	43	91	91	139	43	187	91	235	43		283	91
44	44	92	92	140	44	188	92	236	44		284	92
45	45	93	93	141	45	189	93	237	45		285	93
46	46	94	94	142	46	190	94	238	46		286	94
47	47	95	95	143	47	191	95	239	47		287	95
48	48	96	96	144	48	192	96	240	48		288	96

## ADDRESS GROUPS of 96

# Group 289~384

# Group 385~480

# Group 481~512

	Kalatel	Panasonic										
	289	1	337	49	385	1	433	49	481	1		
	290	2	338	50	386	2	434	50	482	2		
	291	3	339	51	387	3	435	51	483	3		
	292	4	340	52	388	4	436	52	484	4		
	293	5	341	53	389	5	437	53	485	5		
	294	6	342	54	390	6	438	54	486	6		
	295	7	343	55	391	7	439	55	487	7		
	296	8	344	56	392	8	440	56	488	8		
	297	9	345	57	393	9	441	57	489	9		
	298	10	346	58	394	10	442	58	490	10		
	299	11	347	59	395	11	443	59	491	11		
	300	12	348	60	396	12	444	60	492	12		
	301	13	349	61	397	13	445	61	493	13		
	302	14	350	62	398	14	446	62	494	14		
	303	15	351	63	399	15	447	63	495	15		
	304	16	352	64	400	16	448	64	496	16		
	305	17	353	65	401	17	449	65	497	17		
	306	18	354	66	402	18	450	66	498	18		
	307	19	355	67	403	19	451	67	499	19		
	308	20	356	68	404	20	452	68	500	20		
	309	21	357	69	405	21	453	69	501	21		
	310	22	358	70	406	22	454	70	502	22		
	311	23	359	71	407	23	455	71	503	23		
	312	24	360	72	408	24	456	72	504	24		
	313	25	361	73	409	25	457	73	505	25		
	314	26	362	74	410	26	458	74	506	26		
	315	27	363	75	411	27	459	75	507	27		
	316	28	364	76	412	28	460	76	508	28		
	317	29	365	77	413	29	461	77	509	29		
	318	30	366	78	414	30	462	78	510	30		
	319	31	367	79	415	31	463	79	511	31		
	320	32	368	80	416	32	464	80	512	32		
	321	33	369	81	417	33	465	81	-	-		
	322	34	370	82	418	34	466	82				
	323	35	371	83	419	35	467	83				
	324	36	372	84	420	36	468	84				
	325	37	373	85	421	37	469	85				
	326	38	374	86	422	38	470	86				
	327	39	375	87	423	39	471	87				
	328	40	376	88	424	40	472	88				
ļ	329	41	377	89	425	41	473	89				
l	330	42	378	90	426	42	474	90				
	331	43	379	91	427	43	475	91				
	332	44	380	92	428	44	476	92				
l	333	45	381	93	429	45	477	93				
ļ	334	46	382	94	430	46	478	94				
l	335	47	383	95	431	47	479	95				
ļ	336	48	384	96	432	48	480	96				
1			 									

### INSTALLATION



When the Kalatel code stream is detected on the input, the Status indicator will flash two or three times to indicate Digiplex II or Digiplex III, respectively. Then it will flash either two times for 2400 baud or four times for 4167/4800 baud. As long as the code stream is present, the Rx indicator will glow dimly.

When camera control code is sent, the indicator will flash more brightly.

The Tx indicator flashes when Panasonic output code is being sent.



Even though the code translator connects to the Panasonic cameras with only two wires, configure the cameras for four wire operation so that they will not respond on the same pair of wires.

#### OPERATION

Kalatel Pan, Tilt, Zoom, Focus, and Iris commands are converted to the equivalent Panasonic commands. Other commands are converted according to the following table for different styles of keyboards. *Note: KTD-405 keyboard commands are listed in italics.* 

<u>KTD-304</u>	<u>KTD-405</u>	PANASONIC COMMAND			
Presets					
Pgm Preset 01~49	[Store][01~49][Store]	Program Preset 1~49			
Set 01~49	[Find][01~49]	Go to Preset 1~49			

#### **Tours/Patrols**

To store a tour, put the camera in the starting position. Send the Program Preset command to start the recording. Then move the camera through the desired pattern. At the end of the defined pattern, send the Find 50 command.

Pgm Pset 51	[Store][51][Store]	Define Start of Patrol 1
Pgm Pset 52	[Store][52][Store]	Define Start of Patrol 2
Pgm Pset 53	[Store][53][Store]	Define Start of Patrol 3
Set 50	[Find][50]	Define End of Patrol
Once a tour is stored, it can	be run using the following	g commands.
Set 51	[Tour][01]	Run Patrol 1
Set 52	[Tour][02]	Run Patrol 2
Set 53	[Tour][03]	Run Patrol 3

(Panasonic domes may be capable of storing only one Patrol.)

#### Additional commands

Auto Pan	[Tour](Hold 3 seconds)	Autopan
Auto Focus	Auto Focus	Autofocus
Set 56	[Find][56]	ALC On
Set 57	[Find][57]	Manual Iris
Pgm Pset 62	[Store][ []]>][Store]	Set Autopan Start Point
Pgm Pset 63	[Store][ <] ][Store]	Set Autopan End Point

#### Dome On-screen Menu

To bring up the on-screen menu, use Pgm Pset 60. To exit, use Set or Find 60.Pgm Pset 60[Store][60][Store]Activate MenuWhen the code translator sends the Activate Menu command, the Status indicator startsflashing at a fast rate, and the following control functions are in effect:

Pan & Tilt	Move Cursor
Zoom In	Advance to Next Menu Level
Zoom Out	Return to Previous Menu Level
th values to be increased or decr	assad is highlighted tap and release the

When a field with values to be increased or decreased is highlighted, tap and release the joystick repeatedly in the Pan left or right direction to change values.

To access special menu	functions, use Set/Find 6 <sup>,</sup>	1 & 62.
Set 61	[Find][61]	Special Menu Set1 (Cam refresh)
Set 62	[Find][61]	Special Menu Set2 (Cam reset)

The menu does not have an on-screen exit option; use the following command to exit.Set 60[Find][60]Exit Menu/Return to Normal OperationAlso, while in menu mode, any command not used for the menu, such as Focus or Iris, willcause the code translator to send the Exit Menu command.

The code translator menu mode is for only one camera address at a time.